
 


 



 








 
 

 








 

 

 


Original	Replacement	Original	Replacement
	 Power		 TV/R
	 AV		 0
	 Exit		 Guide
	 Menu		 Pre Ch
	 Dual		 Up
	 Media		 Down
	 1		 Left
	 2		 Right
	 3		 Ok
	 Mute		 Vol +
	 Options		 Vol -
	 6		 Ch -
	 5		 Ch +
	 4		 Shift + Power
	 7		 Subt
	 8		 Rec
	 9		 <<

