



Original	Replacement
Power	Power
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Guide	Guide / EPG / -/--
0	0
Recall	Fav / Marker / PC
Google Play	Display / Media
YouTube	Shift + Yellow / YouTube /
Netflix	Shift + Red / Netflix / Search

Original	Replacement
prime video	Shift + Blue / Prime
Home	Shift + Menu /
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Back	Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Vol+	Vol+
Smart/Colours	Smart / List
CH+	CH+ / Page+
Vol-	Vol-
CH-	CH- / Page-
[i+]	Info / Angle
*	Setup / OPT /





Original	Replacement
	Mute / Dimmer
	<< / Tune-
	Pause / Step / Freeze
	>> / Tune+
	Rec / Rec Mode
	Play / Slow
	Stop / Hold
	Text / Goto
	Picture / Format
	Subtitle / EQ
	Audio / Lang I/II
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Original	Replacement

