 



 



 
 

 






 

 


 
 
 

 
 
 
 
 


 



 
 


 



 

 

 



 


 
 

 
 

 

 
 
 





Original	Replacement	Original	Replacement
 On	 Power	 Left	 Left
 Off	 +  Shift + Power	 1	 1
 Tone	 List	 2	 2
 Vol+	 Vol +	 3	 3
 Vol-	 Vol -	 4	 4
 Mute	 Mute	 5	 5
 Test	 Smart	 6	 6
 Night	 Exit	 7	 7
 DIM / [≡]	 Text	 8	 8
 Sleep	 Sleep	 9	 9
 SPKR/Menu	 Menu	 0	 0
 Delay/Prev. CH.	 Info	 Mem/[≡◇]	 Pre Ch
 CH./[≡?]	 TV/R	 Tun-M/[≡+]	 Guide
 Digital/[≡X]	 Media	 Tuning ▲	 Ch +
 Up	 Up	 Tuning ▼	 Ch -
 Down	 Down	 Direct/Green	 Green
 Right	 Right	 Clear/Yellow	 Yellow





Original	Replacement
 Preset ▲	 Shift + Ch +
 Preset ▼	 Shift + Ch -
 OSD	 Back
 RDS	 Options
 OK	 Ok
 Red	 Red
 Blue	 Blue
 AVR	 Shift + 1
 DVD	 Shift + 2
 CD	 Shift + 3
 Tape	 Shift + 4
 VID1	 Shift + 5
 VID2	 Shift + 6
 AUX	 Shift + 7
 HDMI1	 Shift + Red
 HDMI2	 Shift + Green
 HDMI3	 Shift + Yellow

Original	Replacement
 AM/FM	 Shift + 9
> DVD icon" data-bbox="506 188 539 221"/> > DVD	 Play
 << DVD	 <<
 >> DVD	 >>
 Stop DVD	 Stop
 Pause DVD	 Pause
 I<</Skip Down	 I<<
 Skip Up/>>I	 >>I

