






















 





 

 






| Original | Replacement |
|--|---|
|  Power |  Power |
|  Sleep |  Sleep |
|  Mute |  Mute |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -/-- |  GUIDE |
|  Recall |  BACK |
|  Audio |  DUAL |
|  P.M. |  SMART |

| Original | Replacement |
|---|--|
|  Info |  Info |
|  Input |  AV |
|  Up / CH+ |  Up |
|  Up / CH+ |  Ch + |
|  Down / CH- |  Down |
|  Down / CH- |  Ch - |
|  Right / Vol+ / Enter |  Right |
|  Left / Vol- |  Left |
|  Left / Vol- |  Vol - |
|  Right / Vol+ / Enter |  Vol + |
|  Right / Vol+ / Enter |  Ok |
|  Menu |  Menu |
|  Page+ |  >> |
|  Page- |  << |
|  Display |  Shift + Info |
|  Exit |  Exit |
|  Red |  Red |



