
 
 



 
 

 
 





 



 
 


 

 


 
 



 

 
 
 


 


 
 


 
 


 
 

 

 



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 List	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	AV 2	 Shift + AV
9	 9	Browse	 Media
Guide -/-- 1.	 Guide	Contrast+	 Shift + Ch +
0/10	 0	Color- S.Std	 Shift + Dual
2.Fav P/C 2.	 Pre Ch	Contrast-	 Shift + Ch -
Red	 Red	Surround	 Shift + Red
Green	 Green	Nicam/Mono	 Shift + Green
Game Coo	 Options	Level L	 Shift + Yellow
Yellow	 Yellow	Level R/Woofer	 Shift + Blue
Blue	 Blue		
Off/Tim	 Pause		
On/Tim	 Play		
Audio-	 I<<		
Audio+	 >>I		
Tone-	 <<		
Tone+	 >>		
Color+ P.Std	 Format		

