



Original		Replacement		Original		Replacement	
	Power		Power		>>		>>
	Mute		Mute		>>		>>
	Open/Close		Eject		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		Guide		Guide
	4		4		Rec		Rec
	5		5		PR List		List
	6		6		Timer Rec		AV
	7		7		PR+		Ch +
	8		8		PR-		Ch -
	9		9		Home		Smart
	0		0		Music ID		Dual
	Clear		Shift + Clear		Info/Display		Info
	Repeat/Tv/Radi		TV/R		Return		Back
	I<<		I<<		Title/PopUp		Media
	<<		<<		Disc Menu/Rec. List		Menu





Original	Replacement	Original	Replacement
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Marker		Format
	Search		Shift + TV/R
	Zoom		Shift + Eject
	Text		Text
	Subtitle		Subt
	Exit		Exit
	Power Tv		Shift + Power
	AV/Input Tv		Shift + AV

Original	Replacement	Original	Replacement
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	PR+ Tv		Shift + Ch +
	PR- Tv		Shift + Ch -

