



 

 


 
 

 
 
 




 
 
 

 



 
 








	Original	Replacement		Original	Replacement
	Power		Power		Vol +
	Video		3		Aspect
	S-Video		4		Keystone
	Component		5		Down
	Mute		Mute		Up
	Info		Info		D.Zoom+
	Computer 1		1		D.Zoom-
	Computer 2		2		OK
	Menu		Menu		
	Image		3D		
	Right		Right		
	Freeze		Pause		
	Lamp		Options		
	Left		Left		
	Vol-		Vol -		
	Blank		Media		
	P-Timer		AV		

