




 



 







 





 



 





 



 

 

 









 





 














Original	Replacement	Original	Replacement
 POWER	 Power	 PL II MODE	 Smart
 OPEN/CLOSE	 Eject	 TUNING+ / CH+	 Ch +
 DIMMER	 Shift + Mute	 TUNING- / CH-	 Ch -
 DVD	 Blue	 VOLUME+	 Vol +
 TUNER/BAND	 Green	 VOLUME -	 Vol -
 AUX	 Red	 PL II EFFECT	 Media
 ASC	 Shift + Ok	 RETURN	 Back
 SLOW/MO/ST	 List	 MENU	 Menu
 SUBTITLE	 Subt	 INFO	 Info
 SUPER 5.1	 Options	 MUTE	 Mute
 MUSIC/ V-H/P	 Dual	 UP	 Up
 MOVIE	 D. Menu	 LEFT	 Left
 I<<	 I<<	 ENTER	 Ok
 STOP	 Stop	 RIGHT	 Right
 PAUSE	 Pause	 DOWN	 Down
 PLAY	 Play	 1/RDS DISPLAY	 1
 >>I	 >>I	 2	 2





Original	Replacement
3/TA	3
4/PTY -	4
5/PTY SEARCH	5
6/PTY +	6
	7
	8
	9
	0
	Sleep
	Exit
	3D
	Shift + Right
	Shift + Down
	Shift + Eject
	Shift + Up
	Format
	Text

Original	Replacement
	Shift + Left

