





Original	Replacement	Original	Replacement
 Power	 Power	 Yellow/Repeat	 Yellow
 I<<	 I<<	 Blue/A-B	 Blue
 Open/Close	 Eject	 CH+	 Ch +
 <<	 <<	 CH-	 Ch -
 >>	 >>	 Tv-Menu	 Menu
 >>	 >>	 TV/AV	 AV
 Play/Pause	 Play	 Vol+	 Vol +
 TV/TXT/Language	 Text	 Vol-	 Vol -
 Cancel/Zoom	 Shift + Eject	 DTV	 Smart
 Reveal/Subtitle	 Subt	 DVD Setup	 Shift + Menu
 Stop	 Stop	 Exit	 Exit
 Hold/Menu	 D. Menu	 Display	 Shift + Info
 Size/Angle	 Format	 Up	 Up
 Subpage/Title	 Options	 Down	 Down
 Index/Goto	 Media	 Right	 Right
 Red/Program	 Red	 Left	 Left
 Green/Slow	 Green	 OK	 Ok





Original	Replacement
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 +  Shift + Guide
 Recall	 +  Pre Ch
 Picture	 +  Shift + Format
 Sound	 +  Shift + Dual
 Nicam/A2	 DUAL Dual
 Mute	 Mute
 Sleep	 SLEEP Sleep

Original	Replacement
 Info	 INFO Info
 Subtitle	 +  Shift + Subt
 Channel List	 LIST List
 EPG	 GUIDE Guide
 Tv/Radio	 TVR TV/R
 FAV	 +  Shift + Pre Ch
 Aspect	 3D 3D

