 

 



























 













 









 



 













Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	Recall		Back / Return
	Vol+		Vol+
	*/Setting		Setup / OPT /
	P+		CH+ / Page+
	Vol-		Vol-
	HDMI		Shift + 0
	P-		CH- / Page-
	Media		Shift + Display / Media
	P.Mode		Picture / Format
	Home		Shift + Menu /
	S.Mode		Sound / Title
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search





Original	Replacement	Original	Replacement
 SUB.T	Green	 APP	Green / APP / Repeat
 SUB.T	Sub.T	 EQ SUBTITLE	Subtitle / EQ
	Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
 MOUSE	Blue/Mouse	 Prime Video RANDOM	Blue / Prime Video / Random
	Play	 SLOW	Play / Slow
	Pause	 STEP-FREEZE	Pause / Step / Freeze
	Stop	 HOLD	Stop / Hold
	<<	 TUNE-	<< / Tune-
	>>	 TUNE+	>> / Tune+
	I<<	 PRESET-	I<< / Preset-
	>>I	 PRESET+	>>I / Preset+
 REC	Rec	 REC MODE	Rec / Rec Mode

