










Original	Replacement	Original	Replacement
	Power		Power
	PBC		D.Menu / Top
	Display		Display / Media
	Eject		Eject / Surround
	Subtitle		Subtitle / EQ
	Search		Red / Netflix / Search
	Angle		Info / Angle
	Language		Audio / Lang I/II
	Setup		Setup / OPT /
	Title		Sound / Title
	Menu		Menu / Home
	Zoom		Zoom / Size
	Resume		Back / Return
	Up		Up
	Pause		Pause / Step / Freeze
	Left		Left
	Play		Play / Slow
	Play		OK
	Right		Right
	Slow		Shift + Play /
	Down		Down
	Stop		Stop / Hold
	I<< Prev.		I<< / Preset-
	Next >>I		>>I / Preset+
	<< F.R		<< / Tune-
	F.F >>		>> / Tune+
	1/All		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Vol-		Vol-
	Vol+		Vol+
	1		1
	2		2
	3		3
	Mute		Mute / Dimmer





	Original	Replacement		Original	Replacement
		4		4	
		5		5	
		6		6	
		+10		Guide / EPG / -/--	
		7		7	
		8		8	
		9		9	
		0		0	
		Vocal-Assist		Smart / List	
		Program		TV/Radio /	

