
 



 

 

 



 

 

 

 

 

 

 



 

 









 

 

 



 

 







 



 

 

 


 





 
 



 








Original	Replacement	Original	Replacement
	Up		Up
	Power		Power
	Sleep		Sleep
	Display		Shift + Info
	Mute		Mute
	AV/S/Scart		AV
	HDTV/PC/HDMI		Media
	Wide		Format
	Video Mode		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Shift + Guide		Shift + Guide
	Last		Back
	Sound		Dual
	Exit		Exit
	Teletext		Shift + Text
	Menu		Menu
	Down		Down
	Right		Right
	Left		Left
	Select		Ok
	Zoom		Eject
	Surround		D. Menu
	Index		Options
	Subpage		Shift + Subt
	Guide		Guide





	Original	Replacement		Original	Replacement
	Info	 Info			
	Subtitle	 Subt			
	Tv/DTV	 TV/R			
	List	 List			
	CH+	 Ch +			
	CH-	 Ch -			
	Hold	 Stop			
	Vol+	 Vol +			
	Vol-	 Vol -			
	Favorites	 Pre Ch			
	Red	 Red			
	Green	 Green			
	Text	 Text			
	Yellow	 Yellow			
	Blue	 Blue			

	Original	Replacement

