



 
 

 



 









 

 




 
 

 





 
 
 

 
 
 



 

 

 
 
 

 



 
 


 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 [i+]	 INFO	 OK	 Ok
 [+]	 PICTURE FORMAT	 Right	 Right
 <</<	 <<	 Down	 Down
 Play	 PLAY MODE	 RETURN	 SHIFT + RETURN BACK Shift + Back
 Pause	 Pause	 OPTIONS	 SETTINGS OPT Options
 >>/ >	 >>	 HOME	 HOME SMART Smart
 Sync Menu	 TOP MENU MENU Menu	 Red	 A Red
 Stop	 Stop	 Green	 B Green
 Theatre	 SEARCH TV/R TV/R	 Yellow	 C Yellow
 Digital	 E-MANUAL D.MENU D. Menu	 Blue	 D Blue
 Analog	 APP MEDIA Media	 1	 1
 [...]	 AD SUBT Subt	 2	 2
 Audio	 SOUND DUAL Dual	 3	 3
 Guide	 -/-- GUIDE Guide	 4	 4
 Source	 TIMER AV AV	 5	 5
 Up	 Up	 6	 6





	Original	Replacement	Original	Replacement
	7			
	8			
	9			
	0			
	Text			
	FAV			
	Vol+			
	Vol-			
	Mute			
	Prog+			
	Prog-			
	Back			

