




 





 



 



 








 


 

 



 



 

 

 

 
 











 



 



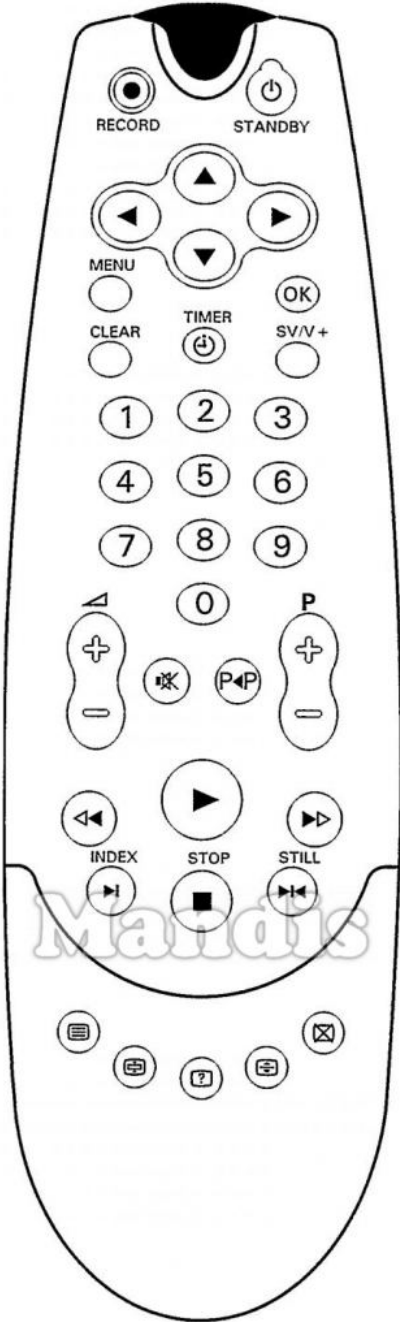 



 

 



 


Original		Replacement		Original		Replacement	
	Standby		Power		6		6
	Record		Rec		7		7
	Up		Up		8		8
	Left		Left		9		9
	Right		Right		0		0
	Down		Down		Vol+		Vol +
	→>		Smart		Vol-		Vol -
	OK		Ok		Mute		Mute
	Menu		Menu		P<P		Pre Ch
	Clear		Exit		P+		Ch +
	Timer		AV		P-		Ch -
	SV/V+		Media		Play		Play
	1		1		<<		<<
	2		2		>>		>>
	3		3		> / Index		>>
	4		4		Stop		Stop
	5		5		> < Still		Pause





	Original	Replacement		Original	Replacement
	Teletext	 REPEAT TEXT	Text		
	Hold	 A	Red		
	Reveal	 B	Green		
	Size	 C	Yellow		
	Cancel	 D	Blue		

	Original	Replacement

