


 





 

 
 

 



 



 




 







 









 





 









 



 

 
Original	Replacement
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Enter	 Pre Ch
 TV/DVD / Input	 AV
 Aspect	 Shift + Format
 SA-CD	 Smart

Original	Replacement
 SA-CD/CD	 Media
 Shuffle	 Yellow
 A-B	 Shift + Play
 Audio	 Dual
 Subtitle	 Subt
 Angle	 Red
 Picture Navi	 3D
 Time/Text	 Text
 Repeat	 Shift + Text
 Sur	 Options
 Picture Mode	 Format
 Search Mode	 TV/R
 Replay	 Shift + I<<
 I<<	 I<<
 >>I	 >>I
 <II [<<]	 Ch -
 [>>] II>	 Ch +



Multi/2CH




 







 
 




 

 





 

 

 


Original	Replacement	Original	Replacement
 << Scan/<I	 <<		
 Scan >>/Slow	 >>		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Up	 Up		
 Left	 Left		
 Enter	 Ok		
 Right	 Right		
 Down	 Down		
 Display	 Info		
 Menu	 Menu		
 Top Menu	 D. Menu		
 Return	 Back		







Original	Replacement	Original	Replacement
 Power	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Enter	 Ok		
 TV/DVD	 TV/R		
 Vol+	 Vol +		
 Vol-	 Vol -		

