

 


 
 


 








 
 


 
 

 

 


 

 

 







	Original	Replacement		Original	Replacement
	Power		Power		Tv Display
	Mute		Mute		Info
	1		1		Up
	2		2		Down
	3		3		Right
	4		4		Left
	5		5		Enter
	6		6		Ok
	7		7		Vol +
	8		8		Vol -
	9		9		S.M.
	0		0		Smart
	.		Shift + Guide		P.M.
	Recall		Back		Media
	Menu		Menu		Ch +
	Source		AV		Ch -
	Exit		Exit		EPG Page Up
					EPG Page Down
					Sleep
					P.G.
					Aspect
					Sleep
					Format
					3D





Original		Replacement		Original		Replacement	
	CH List		List				
	EPG		Guide				
	FAV		Pre Ch				
	DTV Strenght		D. Menu				
	TV		TV/R				
	AV		Eject				
	HDMI		Text				
	YPbPr		Shift + Format				
	CC		Subt				
	MTS/SAP		Dual				
	VGA		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

