



Original	Replacement	Original	Replacement
 Power	 Power	 Up / CH+	 Ch +
 Mute	 Mute	 Down / CH-	 Down
 1	 1	 Down / CH-	 Ch -
 2	 2	 Right / Vol+	 Right
 3	 3	 Right / Vol+	 Vol +
 4	 4	 Left / Vol-	 Left
 5	 5	 Left / Vol-	 Vol -
 6	 6	 OK	 Ok
 7	 7	 Fav	 Pre Ch
 8	 8	 Exit	 Exit
 9	 9	 Red / Find	 Red
 0	 0	 Red / Find	 Shift + TV/R
 TV/R	 TV/R	 Yellow / Disp	 Yellow
 Sleep	 Sleep	 Green / Audio	 Green
 EPG	 Guide	 Green / Audio	 Dual
 Menu	 Menu	 Blue / Zoom	 Blue
 Up / CH+	 Up	 Blue / Zoom	 Eject





Original	Replacement
Page+ / Mark	Smart
Page- / Jump Mark	Media
Recall	Back
Info	Info
Sub	Subt
DVR Info	+ Shift + Info
TXT	Text
<<	<<
>>	>>
Play	Play
Stop / USB	Stop
I<<	I<<
>>I	>>I
Pause	Pause
Rec	Rec

Original	Replacement

