



 


 




 



 



 

 

 



 
 
 

 
 


 

 


 






 








 
 









Original		Replacement		Original		Replacement	
	Power		Power		<<		<<
	Eject		Eject		Play		Play
	Tv/VCR		TV/R		>>		>>
	AV		AV		Pause/Still		Pause
	CM Skip		Smart		Stop		Stop
	1		1		LP		Format
	2		2		i		Info
	3		3		OK/CLK/CNT		Ok
	4		4		Rec/OTR		Rec
	5		5		Clear		Exit
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		C.Lock		Blue
	ez Power Off		Media				
	ez Repeat		Text				

