



Original	Replacement	Original	Replacement
Power On	Power	2	2
Power Off	Shift + Power	3	3
Mute	Mute	4	4
Stereo	Shift + Dual	5	5
Cable/Sat	Green	6	6
TV	Blue	7	7
CD	Yellow	8	8
Menu	Menu	9	9
Harman Volume	Smart	0	0
Exit	Exit	Clear	Shift + Exit
Tone Control	Back	Direct	Guide
Up	Up	Vol+	Vol +
Down	Down	Vol-	Vol -
Right	Right	CH/Tuner Up	Ch +
Left	Left	CH/Tuner Down	Ch -
OK	Ok	Speaker 1	Options
1	1	Speaker 2	Dual





Original	Replacement
 Sleep	 Sleep
 Dim	 TV/R
 P.Scan	 Text
 A.Preset	 AV
 MEM	 Format
 RDS	 Subt
 Prev.CH	 Pre Ch
 I<	 I<<
 <<	 <<
 >>	 >>
 >I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Phono	 Shift + 1
 FM/AM	 Shift + 2
 USB	 Shift + 3

Original	Replacement
 Bluetooth	 Shift + 4
 vTuner	 Shift + 5
 Network	 Shift + 6
 AUX	 Shift + 7
 Digital	 Shift + 8





Original		Replacement		Original		Replacement	
	Power On		Power		2		2
	Power Off		Shift + Power		3		3
	Mute		Mute		4		4
	Stereo		Shift + Dual		5		5
	Cable/SAT		Green		6		6
	TV		Blue		7		7
	CD		Yellow		8		8
	Menu		Menu		9		9
	Harman Volume		Smart		0		0
	Exit		Exit		Clear		Shift + Exit
	Tone Control		Back		Direct		Guide
	Up		Up		Vol+ Stereo		Vol +
	Down		Down		Vol- Stereo		Vol -
	Right		Right		CH/Tuner Down		Ch +
	Left		Left		CH/Tuner Up		Ch -
	OK		Ok		Speaker 1		Options
	1		1		Speaker 2		Dual





Original		Replacement		Original		Replacement	
	Sleep		Sleep				
	DIM		TV/R				
	P.Scan		Text				
	A.Preset		AV				
	MEM		Format				
	RDS		Subt				
	Prev.CH		Pre Ch				
	I<		I<<				
	<<		<<				
	>>		>>				
	>I		>>I				
	Stop		Stop				
	Play		Play				
	Pause		Pause				

