


 
 
 

















| Original  | Replacement      |
|---|------------------|
|    | Power            |
|    | Sleep            |
|    | 1                |
|    | 2                |
|    | 3                |
|    | 4                |
|    | 5                |
|    | 6                |
|    | 7                |
|   | 8                |
|  | 9                |
|  | Mute / Dimmer    |
|  | 0                |
|  | Back / Return    |
|  | Subtitle / EQ    |
|  | Sound / Title    |
|  | Eject / Surround |

| Original  | Replacement      |
|---|------------------|
|    | Vol+             |
|    | Shift + Menu /   |
|    | CH+ / Page+      |
|    | Vol-             |
|    | Display / Media  |
|    | CH- / Page-      |
|    | Smart / List     |
|    | D.Menu / Top     |
|    | Picture / Format |
|   | Menu / Home      |
|  | Up               |
|  | AV / Input / RDS |
|  | Left             |
|  | OK               |
|  | Right            |
|  | Info / Angle     |
|  | Down             |





| Original  | Replacement   |
|---|---|
|  Exit          |  Exit / Cancel / Clear       |
|  Red           |  Red / Netflix / Search      |
|  Green         |  Green / APP / Repeat        |
|  Yellow        |  Yellow / YouTube / Repeat   |
|  Blue          |  Blue / Prime Video / Random |
|  << / [≡i]     |  << / Tune-                  |
|  Play          |  Play / Slow                 |
|  Pause / [≡◇]  |  Pause / Step / Freeze       |
|  >> / [≡?]     |  >> / Tune+                  |
|   << / [≡o]   |   << / Preset-              |
|  Stop / [≡+] |  Stop / Hold               |
|  >>  / [≡x]  |  >>  / Preset+             |
|  Rec         |  Rec / Rec Mode            |
|  [ / ≡]      |  Zoom / Size               |
|  FAV         |  Fav / Marker / PC         |
|  EPG         |  Guide / EPG / -/--        |
|  Tv/Radio    |  TV/Radio /                |

| Original  | Replacement   |
|---|---|
|  USB |  Shift + 8 |

