




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Off Timer	 Sleep / Timer
 Guide	 Guide / EPG / -/--
 Up	 Up
 Tv/AV	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [=]/Text	 Text / Goto

Original	Replacement
 [=◇]/F.P.	 Smart / List
 [=i]/Index	 Display / Media
 [=+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 C	 Back / Return
 0/VCR	 0
 0/VCR	 Shift + 4
 i	 Info / Angle
 CH+	 CH+ / Page+





Original	Replacement	Original	Replacement
 Vol+	 Vol+		
 CH-	 CH- / Page-		
 Vol-	 Vol-		
 [ + ]/Aspect	 Picture / Format		
 N	 D.Menu / Top		
 Power VCR	 Shift + Power		
 Rec VCR	 Rec / Rec Mode		
 Programme Down	 Shift + CH- /		
 Programme Up	 Shift + CH+ /		
 << VCR	 << / Tune-		
 >> VCR	 >> / Tune+		
 Stop VCR	 Stop / Hold		
 Pause/Step VCR	 Pause / Step / Freeze		
 Play VCR	 Play / Slow		

Original	Replacement	Original	Replacement





Original		Replacement		Original		Replacement	
	Power DVD		Power				
	Rec DVD		Rec / Rec Mode				
	Programme Down		CH- / Page-				
	Programme Up		CH+ / Page+				
	I<< DVD		I<< / Preset-				
	>>I DVD		>>I / Preset+				
	Stop DVD		Stop / Hold				
	Pause/Step DVD		Pause / Step / Freeze				
	Play DVD		Play / Slow				

