



Original	Replacement
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Red / Netflix / Search
	<< / Tune-
	Green / APP / Repeat
	Stop / Hold

Original	Replacement
	Play / Slow
	Yellow / YouTube / Repeat
	>> / Tune+
	Blue / Prime Video / Random
	Up
	Left
	OK
	Right
	Down
	D.Menu / Top
	Back / Return
	Exit / Cancel / Clear
	Info / Angle
	CH+ / Page+
	TV/Radio /
	Vol+
	CH- / Page-





Original	Replacement
 Menu	 Menu / Home
 Vol -	 Vol-
 TV/SAT	 Smart / List
 TXT	 Text / Goto
 Stop	 Pause / Step / Freeze
 EXT	 Display / Media
 SAT1 + OK	 Shift + 2
 SAT2 + OK	 Shift + 3
 TV + OK	 Shift + 1
 PIP	 Picture / Format

Original	Replacement





Original	Replacement		
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	✓		Guide / EPG / -/--
	0		0
	A/B	+	Shift + Yellow / YouTube /
	Red / <<<		<<< / Tune-
	Red / <<<		Red / Netflix / Search
	Green / Stop		Green / APP / Repeat

Original	Replacement		
	Green / Stop		Stop / Hold
	Yellow / Play		Play / Slow
	Yellow / Play		Yellow / YouTube / Repeat
	Blue / >>>		>>> / Tune+
	Blue / >>>		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI		D.Menu / Top
	Exit / Recall		Exit / Cancel / Clear
	Exit / Recall		Back / Return
	Info		Info / Angle
	Prog +		CH+ / Page+
	TV / Radio		TV/Radio /
	Vol +		Vol+





Original		Replacement	
	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol -		Vol-
	TV/SAT		Smart / List
	TXT		Text / Goto
	Stop		Pause / Step / Freeze
	EXT		Display / Media
	SAT1 + OK	+	Shift + 2
	SAT2 + OK	+	Shift + 3
	TV + OK	+	Shift + 1

Original		Replacement	





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-
 Green / Stop	 Stop / Hold

Original	Replacement
 Green / Stop	 Green / APP / Repeat
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>	 >> / Tune+
 Blue / >>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+





Original		Replacement	
	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol -		Vol-
	TV/SAT		Smart / List
	TXT		Text / Goto
	Stop		Pause / Step / Freeze
	EXT		Display / Media
	SAT1 + OK		Shift + 2
	SAT2 + OK		Shift + 3
	TV + OK		Shift + 1

Original		Replacement	

