 



 

 



 
 


 


 




 
 
 


 
 

 
 

 
 
 
 
 
 
 
 




 





 


 


 





| Original   | Replacement   | Original   | Replacement   |
|--|---|--|---|
|  Power        |  Power   |  DVD Menu       |  D. Menu |
|  Open / Close |  Eject   |  Setup          |  Menu    |
|  1            |  1       |  I<<            |  I<<     |
|  2            |  2       |  >>I            |  >>I     |
|  3            |  3       |  Up             |  Up      |
|  4            |  4       |  Left           |  Left    |
|  5            |  5       |  Enter          |  Ok      |
|  6            |  6       |  Right          |  Right   |
|  7            |  7       |  Down           |  Down    |
|  8           |  8      |  <<            |  <<     |
|  9          |  9     |  >>           |  >>    |
|  0          |  0     |  Play         |  Play  |
|  Display    |  Info  |  Pause / Step |  Pause |
|  +10        |  Guide |  Slow         |  Rec   |
|  Vol-       |  Vol - |  Stop         |  Stop  |
|  Vol+       |  Vol + |  Program      |  Sleep |
|  Mute       |  Mute  |  Subtitle     |  Subt  |



