










 











 


























Original	Replacement
	 Eject / Surround
	 Power
	 Display / Media
	 Picture / Format
	 Audio / Lang I/II
	 Smart / List
	 Exit / Cancel / Clear
	 TV/Radio /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9

Original	Replacement
	 Guide / EPG / -/--
	 0
	 AV / Input / RDS
	 Vol+
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 Rec / Rec Mode
	 Shift + Slow Play /
	 Shift + Tune+ >> /
	 D.Menu / Top
	 I<< / Preset-
	 >>I / Preset+
	 Menu / Home
	 Up
	 Pause / Step / Freeze
	 Sleep / Timer













Original	Replacement
	 Left
	 << / Tune-
	 OK
	 Play / Slow
	 Right
	 >> / Tune+
	 Down
	 Stop / Hold







Original	Replacement







Original	Replacement
 Power	 Power
 Display	 Display / Media
 Format	 Picture / Format
 Audio Monitor	 Audio / Lang I/II
 TV / Video	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / +/-
 0	 0
 Vol+	 Vol+

Original	Replacement
 Prog+	 CH+ / Page+
 Vol-	 Vol-
 Prog-	 CH- / Page-

