 





 

 






 
 


 



 

 









Original	Replacement	Original	Replacement
	Power		Power
	FL Display		Smart
	TUNER BAND		Green
	AUX		Red
	Top Menu		D. Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Back
	I<<<		I<<<
	>>>		>>>
	<<<		<<<
	>>>		>>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Disc Skip		Sleep
	SFC		Eject
	CH-		Ch -
	CH+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Subwoofer		Shift + 4
	Action		Options
	Subtitle		Subt
	Audio		Dual
	Angle		Format
	Marker		3D
	CH Select		Shift + Media
















 



 









 




 



Original	Replacement
 Test	 Shift + 6
 Mix 2CH	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 >10 / Enter	 Guide
 Disc	 Pre Ch
 Seat Position	 Shift + 1
 Center Focus	 TV/R
 Super Surround	 Shift + 3

Original	Replacement
 Pro Logic	 Shift + 5
 Disc Manager	 List
 Play Mode	 Shift + Play
 Cancel	 Exit
 Repeat	 Text
 A-B Repeat	 Shift + Text
 Cinema	 Media
 Timer	 AV








 



























 




Original	Replacement	Original	Replacement
 Power	 Power		
 TV Vol-	 Vol -		
 TV Vol+	 Vol +		
 TV / Video	 AV		
 CH+	 Ch +		
 CH-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 ≥10	 Guide		





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10		Guide
	CH+		Ch +
	CH-		Ch -
	Stop		Stop
	<<		<<
	>>		>>
			Play
			Play

