




 

 

 
 
 

 





 

 






 









 
 
 

 

 



 

 
 







 


 









Original		Replacement		Original		Replacement	
	Standby		Power		Open/Close		Eject
	DVD		Smart		Tv/Video		TV/R
	HDD		Media		Guide		Guide
	1		1		Info		Info
	2		2		Enter		Ok
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Menu		Menu
	8		8		Top Menu		Shift + Menu
	9		9		Cancel		Exit
	0		0		Navigation		List
	Vol+ Tv		Vol +		Return		Back
	Vol- Tv		Vol -		Edit		Text
	PR+		Ch +		Prog		Sleep
	PR-		Ch -		I<</Day(-)		I<<





Original	Replacement	Original	Replacement
>>I/Day(+)	>>I	Rec	Rec
Play	Play	Angle/Live Check	D. Menu
Stop/Clear	Stop	Standby Tv	Shift + Power
Pause	Pause	Tv/Video Tv	Shift + TV/R
<</Slow-	<<	Live	3D
>>/Slow+	>>	?/Help	Pre Ch
Memo/Mark	AV	PR+ Tv	Shift + Ch +
Red/Display	Red	PR- Tv	Shift + Ch -
Green/On	Green	Prog Tv	Shift + Sleep
Yellow/Recall	Yellow	1 Tv	Shift + 1
Blue/→	Blue	2 Tv	Shift + 2
Audio	Dual	3 Tv	Shift + 3
Subtitle/VPS/PDC/Timer	Subt	4 Tv	Shift + 4
Format/Output	Format	5 Tv	Shift + 5
Dubbing	Shift + Options	6 Tv	Shift + 6
Setup	Options	7 Tv	Shift + 7
Rec	Shift + Rec	8 Tv	Shift + 8

Original	Replacement	Original	Replacement
Rec	Rec	Angle/Live Check	D. Menu
Standby Tv	Shift + Power	Tv/Video Tv	Shift + TV/R
Live	3D	?/Help	Pre Ch
PR+ Tv	Shift + Ch +	PR- Tv	Shift + Ch -
Prog Tv	Shift + Sleep	1 Tv	Shift + 1
2 Tv	Shift + 2	3 Tv	Shift + 3
4 Tv	Shift + 4	5 Tv	Shift + 5
6 Tv	Shift + 6	7 Tv	Shift + 7
8 Tv	Shift + 8		



Mode/Remain



