



Original	Replacement	Original	Replacement
 Power	 Power	 Mouse	 Shift + Media
 Mute	 Mute	 www	 Media
 1	 1	 Back	 Back
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 Smart TV	 Smart
 0	 0	 Home	 Shift + Smart
 Radio	 TV/R	 Refresh	 D. Menu
 Time Shift	 3D	 CH+	 Ch +
 Sleep	 Sleep	 CH-	 Ch -
 Rec	 Rec	 Red / <<	 Red
 Fav	 Shift + Pre Ch	 Red / <<	 <<





Original	Replacement
Green / >>	Green
Green / >>	>>
Yellow / I<<	Yellow
Yellow / I<<	I<<
Blue / >>	Blue
Blue / >>	>>
Text / Play/Pause	Text
Text / Play/Pause	Play
Text / Play/Pause	Pause
Stop / Cancel	Stop
Reveal	Shift + Text
Size	Eject
PVR List / Index	Shift + List
Subtitle	Subt
S.Mode	Dual
List	List
P.Mode	Format

Original	Replacement
Info	Info
≡	Options
Menu	Menu
Pre-CH	Pre Ch
Audio	Shift + Dual
EPG	Guide
Source	AV
Exit	Exit

