






 


 
 



 

 


 
 
 


 
 
 

 








Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 02	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info
 0	 0
 R	 Back
 TV	 Media
 Sleep	 Sleep
 ■	 Smart

Original	Replacement
 Up / P+	 Up
 Up / P+	 Ch +
 Audio	 Dual
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Down / P-	 Down
 Down / P-	 Ch -
 Text	 Text
 Input	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text Cancel	 Stop
 Text Reveal	 Play





Original		Replacement		Original	Replacement
	Text Timer		>>		
	Text Up		>>		
	Text Index		<<		
	Text Size		Rec		
	Text Hold		Pause		
	Text Down		I<<		

