 



 













 
 



 



 
 

 



 



Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <</Size	 << / Tune-
 >>/Subpage	 >> / Tune+
 I<</FAV	 I<< / Preset-
 >>I/Index	 >>I / Preset+
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Aspect	 Picture / Format
 Tv/Radio	 TV/Radio /
 Text	 Text / Goto
 Source	 AV / Input / RDS
 Menu	 Menu / Home

Original	Replacement
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Exit	 Exit / Cancel / Clear
 Recall	 Back / Return
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Display	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Replacement	Original	Replacement
	 6	 6		
	 7	 7		
	 8	 8		
	 9	 9		
	 0	 0		
	 EPG	 Guide / EPG / -/--		
	 Red	 Red / Netflix / Search		
	 Green	 Green / APP / Repeat		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		
	 Hold	 Shift + Stop /		
	 -/--	 Shift + Guide / EPG / -/--		

