



Original	Replacement	Original	Replacement
	POWER		Power
	MUTE		Mute
	AUDIO		Dual
	HDMI		Media
	TV/R		TV/R
	SLEEP		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide
	0		0
	USB		AV
	MENU		Menu
	PR+ / UP		Up
	PR+		Ch +
	EXIT		Exit
	VOL- / LEFT		Left
	VOL-		Vol -
	OK		Ok
	VOL+ / RIGHT		Right
	VOL+		Vol +
	P+		Shift + Ch +
	PR- / DOWN		Down
	PR-		Ch -
	←PR		Back
	P-		Shift + Ch -
	FAV		Pre Ch
	ZOOM		Eject





Original	Replacement	Original	Replacement
 RED / FIND	 Red		
 GREEN	 Green		
 YELLOW	 Yellow		
 BLUE	 Blue		
 INFO / A-B	 Info		
 PVR	 Smart		
 SUBT / SWAP	 Subt		
 TXT	 Text		
 SKIP PREV	 I<<		
 SKIP NEXT	 >>I		
 REW	 <<		
 FWD	 >>		
 PAUSE / STEP	 Pause		
 REC	 Rec		
 PLAY	 Play		
 STOP	 Stop		

