




 

 
 





















 







Original	Replacement
Standby	Power
AQT/Auto/Open/CI	Eject / Surround
P.Mode	Picture / Format
S.Mode	Sound / Title
List/Angle	Smart / List
Aspect	Setup / OPT /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Recall	Back / Return

Original	Replacement
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
Audio	Audio / Lang I/II
Sub-T	Subtitle / EQ
CH+	CH+ / Page+
CH-	CH- / Page-
Menu	Menu / Home
Info	Info / Angle
Input	AV / Input / RDS
DVD Setup/Exit	Exit / Cancel / Clear
Sleep	Sleep / Timer
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK






Original	Replacement
 Rec	 Rec / Rec Mode
 Red/D.Prog/Tv/	 Red / Netflix / Search
 Green/Step	 Green / APP / Repeat
 Yellow/RPT	 Yellow / YouTube / Repeat
 Blue/A-B/SCR	 Blue / Prime Video / Random
 [=]/Slow	 Text / Goto
 [=▲]/Stop	 Stop / Hold
 [=▼]/Zoom	 Zoom / Size
 [=i]/I<<	 I<< / Preset-
 [=+]/Play/Pause	 Play / Slow
 [=>]/>>	 >>I / Preset+
 [=?]/<<	 << / Tune-
 [=o]/>>	 >> / Tune+
 EPG/D.Menu	 Guide / EPG / -/-
 FAV/D.Title	 Fav / Marker / PC
 FAV+/D.Goto	 Shift + CH+ /
 FAV-/D.Disp	 Shift + CH- /

Original	Replacement





Original	Replacement
 Standby	 Power
 AQT/Auto/Open/CI	 Eject / Surround
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 List/Angle	 Smart / List
 Aspect	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back / Return

Original	Replacement
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Sub-T	 Subtitle / EQ
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Info	 Info / Angle
 Input	 AV / Input / RDS
 DVD Setup/Exit	 Exit / Cancel / Clear
 Sleep	 Sleep / Timer
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK





Original	Replacement	Original	Replacement
Rec	Rec / Rec Mode		
Red/D.Prog/Tv/	Red / Netflix / Search		
Green/Step	Green / APP / Repeat		
Yellow/RPT	Yellow / YouTube / Repeat		
Blue/A-B/SCR	Blue / Prime Video / Random		
[=]/Slow	Text / Goto		
[=▲]/Stop	Stop / Hold		
[=▼]/Zoom	Zoom / Size		
[=i]/I<<	I<< / Preset-		
[=+]/Play/Pause	Play / Slow		
[=▶]/>>I	>>I / Preset+		
[=?]/<<<	<<< / Tune-		
[=o]/>>>	>>> / Tune+		
EPG/D.Menu	Guide / EPG / /--		
FAV/D.Title	Fav / Marker / PC		
FAV+/D.Goto	+ Shift + CH+ /		
FAV-/D.Disp	+ Shift + CH- /		

Original	Replacement	Original	Replacement

