


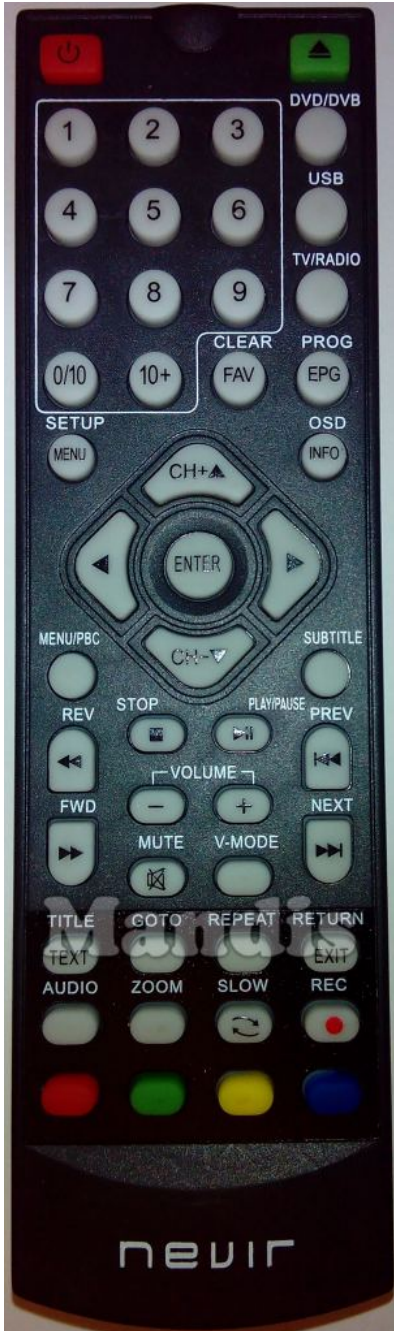

Original	Replacement	Original	Replacement
	Power		Power
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+		Shift + Guide / EPG / -/--
	DVD/DVB		AV / Input / RDS
	USB		Shift + 8
	Tv/Radio		TV/Radio /
	FAV		Fav / Marker / PC
	EPG/Prog		Guide / EPG / -/--
	Menu/Setup		Menu / Home
	Info/OSD		Info / Angle
	Menu/PBC		Shift + Menu /
	Subtitle		Subtitle / EQ
	Down/CH-		CH- / Page-
	<</Rev		<< / Tune-
	UP/CH+		CH+ / Page+
	>>/Fwd		>> / Tune+
	Left		Left
	Stop		Stop / Hold
	Right		Right
	Play/Pause		Play / Slow
	I<</Prev		I<< / Preset-
	Enter		OK
	>>I/Next		>>I / Preset+
	Vol-		Vol-





Original		Replacement		Original		Replacement	
	Vol+		Vol+				
	Mute		Mute / Dimmer				
	V-Mode		Sound / Title				
	Text/Title		Text / Goto				
	Goto		Shift + Text /				
	Repeat		Shift + Green / APP /				
	Exit/Return		Exit / Cancel / Clear				
	Audio		Audio / Lang I/II				
	Zoom		Zoom / Size				
	Back/Slow		Back / Return				
	Rec		Rec / Rec Mode				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

