
















 

 
 

 




 









| Original | Replacement |
|---|--|
|  Power |  Power |
|  Info |  Info / Angle |
|  Mute |  Mute / Dimmer |
|  I - II |  Audio / Lang I/II |
|  Fav |  Fav / Marker / PC |
|  AV / Source |  AV / Input / RDS |
|  TV / DTV |  TV/Radio / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Red / Page+ |  Red / Netflix / Search |
|  Red / Page+ |  Shift + CH+ / |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Green / Page- |  Shift + CH- / |
|  Green / Page- |  Green / APP / Repeat |

| Original | Replacement |
|---|---|
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Yellow |  Yellow / YouTube / Repeat |
|  -/-- / Exit |  Shift + Guide / EPG / -/-- |
|  -/-- / Exit |  Exit / Cancel / Clear |
|  0 |  0 |
|  M |  Menu / Home |
|  Blue |  Blue / Prime Video / Random |
|  Up |  Up |
|  Left |  Left |
|  OK / Select |  OK |
|  Right |  Right |
|  Down |  Down |
|  P+ |  CH+ / Page+ |
|  P- |  CH- / Page- |
|  V- |  Vol- |





| Original | | Replacement | | Original | | Replacement | |
|----------|------------|-------------|-------------------------------|----------|---------------|-------------|--------------------------|
| | V+ | | Vol+ | | Size / Wide | | Zoom / Size |
| | Stop | | Stop / Hold | | Reveal / PIP | | Shift + AV / Input / RDS |
| | Play | | Play / Slow | | Index / Guide | | Guide / EPG / -/-- |
| | Pause | | Pause / Step / Freeze | | Mix / PIP | | Picture / Format |
| | LIB | | Display / Media | | | | |
| | Rec | | Rec / Rec Mode | | | | |
| | << | | << / Tune- | | | | |
| | >> | | >> / Tune+ | | | | |
| | Time | | Sleep / Timer | | | | |
| | PIP- | | I<< / Preset- | | | | |
| | PIP+ | | >>I / Preset+ | | | | |
| | P<P / Swap | | Back / Return | | | | |
| | PP | | Eject / Surround | | | | |
| | Text | | Text / Goto | | | | |
| | Subpage | | Subtitle / EQ | | | | |
| | Hold | | Shift + Stop / | | | | |
| | Cancel | | Shift + Exit / Cancel / Clear | | | | |

