














































 
























Original		Replacement		Original		Replacement	
	Power		Power		16:9		Picture / Format
	Mute		Mute / Dimmer		Up		Up
	1		1		PR+		CH+ / Page+
	2		2		PR-		CH- / Page-
	3		3		Down		Down
	4		4		Right		Right
	5		5		Vol-		Vol-
	6		6		Vol+		Vol+
	7		7		Left		Left
	8		8		OK		OK
	9		9		i		Info / Angle
	0		0		Red		Red / Netflix / Search
	-/--		Guide / EPG / -/--		Green		Green / APP / Repeat
	AV/TV		AV / Input / RDS		Yellow/Timer		Yellow / YouTube / Repeat
	Menu		Menu / Home		Blue/→ ←		Blue / Prime Video / Random
	TXT		Text / Goto		Stop		Stop / Hold
	Swap		Back / Return		Reveal		TV/Radio /



