






 




 







 

 
 




 



 

 

 

 

 



 



 



 



 



 



 







Original	Replacement	Original	Replacement
 Power	 Power	 Down	 Down
 Last Memory	 TV/Radio /	 Right	 Right
 Conditon	 Zoom / Size	 Left	 Left
 Open/Close	 Eject / Surround	 OK	 OK
 Audio	 Audio / Lang I/II	 Stop	 Stop / Hold
 Subtitle	 Subtitle / EQ	 Play	 Play / Slow
 Angle	 Info / Angle	 Pause	 Pause / Step / Freeze
 Setup	 Setup / OPT /	 <I/Step	 CH- / Page-
 Menu	 Menu / Home	 Slow I>	 CH+ / Page+
 Top Menu	 D.Menu / Top	 <</Rev	 << / Tune-
 Repeat	 Green / APP / Repeat	 >>/Fwd	 >> / Tune+
 Repeat A-B	 Yellow / YouTube / Repeat	 1	 1
 Display	 Display / Media	 2	 2
 Return	 Back / Return	 3	 3
 I<</Prev	 I<< / Preset-	 4	 4
 >>I/Next	 >>I / Preset+	 5	 5
 Up	 Up	 6	 6





	Original	Replacement	Original	Replacement
7	7	7		
8	8	8		
9	9	9		
0	0	0		
+10	+10	Guide / EPG / -/--		
CLEAR	Clear	Exit / Cancel / Clear		
RANDOM	Random	Blue / Prime Video / Random		
PROGRAM	Program	+  Shift + TV/Radio / Program		
SEARCH MODE	Search Mode	Red / Netflix / Search		

