







 

 

 
 


 



 

 

 





Original	Replacement
	Power
	Red / Netflix / Search
	Mute / Dimmer
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Sleep / Timer
	Exit / Cancel / Clear
	Display / Media
	Back / Return
	Shift + TV/Radio / Program
	Audio / Lang I/II
	Text / Goto
	AV / Input / RDS
	Up
	CH+ / Page+
	Down

Original	Replacement
	CH- / Page-
	Right
	Left
	Vol-
	Menu / Home
	OK
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0





Original	Replacement
 Last	 Shift + Back / Return
 P.STD	 Smart / List
 S.STD	 Eject / Surround
 ARC	 Stop / Hold
 STILL	 Pause / Step / Freeze
 Zoom-	 Zoom / Size
 Zoom+	 Setup / OPT /
 Multi-PiP	 TV/Radio /
 Size	 Shift + Zoom /
 S.Swap	 Subtitle / EQ
 Win-Sel	 D.Menu / Top
 Locate	 Sound / Title
 Swap	 Picture / Format

Original	Replacement

