

 


 
 





Original	Replacement	Original	Replacement
	Power		Power
	Power USB/Audio		Smart / List
	Open/Close		Eject / Surround
	Power CD/FM		Shift + Power
	CD/FM		3
	Dock		Green / APP / Repeat
	USB/Audio In		8
	Preset/Album Up USB/Audio In		CH+ / Page+
	Preset/Album Up		Up
	Preset/Album Up CD/FM		Shift + Up
	Preset/Album Down USB/Audio		CH- / Page-
	Preset/Album Down		Down
	Preset/Album Down CD/FM		Shift + Down
	I<< USB/Audio In		Shift + I<< / Preset-
	I<<		I<< / Preset-
	I<< CD/FM		Left
	>>I USB/Audio In		Shift + >>I / Preset+
	>>I		>>I / Preset+
	>>I CD/FM		Right
	OK USB/Audio		5
	OK		OK
	OK CD/FM		Shift + OK
	Play USB/Audio In		Shift + Play /
	Play/Pause CD/FM		Pause / Step / Freeze
	Play/Pause		Play / Slow
	Vol+		Vol+
	Vol-		Vol-
	Menu USB/Audio		Shift + Display / Media
	Menu Stop USB/Audio In		>> / Tune+
	Menu Stop CD/FM		Shift + Stop /
	Menu CD/FM		D.Menu / Top
	Menu Stop		Stop / Hold
	Menu		Menu / Home
	Display		Display / Media





	Original	Replacement
	Display CD/FM	 Picture / Format
	Display USB/Audio In	 Info / Angle
	Mute	 Mute / Dimmer
	Repeat Shuffle CD/FM	 AV / Input / RDS
	Repeat/Shuffle	 << / Tune-
	Repeat/Shuffle USB/Audio In	 Back / Return
	Prog CD/FM	 Setup / OPT /
	Prog	 Text / Goto
	Prog USB/Audio In	 Exit / Cancel / Clear
	Sound	 Sound / Title
	Clock	 Blue / Prime Video / Random
	Sleep/Timer	 Sleep / Timer

	Original	Replacement

