



Original	Replacement	Original	Replacement
	Off/On		Power
	Sleep		Sleep / Timer
	Display		Display / Media
	FM Mode		AV / Input / RDS
	Tuner / Band		Shift + 6
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
	+10		Guide / EPG / -/--
	Program		TV/Radio /
	Cancel		Exit / Cancel / Clear
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	CD		Shift + 3
	CD Pause		Pause / Step / Freeze
	CD I<<</>>>		<< / Tune-
	CD I<<</>>>		I<<< / Preset-
	CD >>>/<<<		>> / Tune+
	CD >>>/<<<		>>> / Preset+
	CD Play		Play / Slow
	CD Stop		Stop / Hold
	TAPE Reverse		Menu / Home
	TAPE Counter		Info / Angle
	TAPE Deck 1/2		Smart / List
	TAPE Rec Pause		Shift + Rec / Rec Mode
	TAPE <<<		Down
	TAPE <<<		Shift + << / Tune-





	Original	Replacement		Original	Replacement
	TAPE >>	Up			
	TAPE >>	+ Shift + >> /			
	TAPE Stop	OK			
	TAPE Stop	+ Shift + Stop /			
	TAPE Rev. Play	Left			
	TAPE Play	Right			
	TAPE Play	+ Shift + Play /			
	Volume-	Vol-			
	Volume+	Vol+			

