













 

 



 



 













 



















 



 

 







Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Open/Close		Eject / Surround
	USB		Shift + 8
	USB		CH+ / Page+
	Prog		TV/Radio /
	Mark		Fav / Marker / PC
	Clear		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide / EPG / -/-
	Goto		Text / Goto
	<<		<< / Tune-
	Vol-		Vol-
	Vol+		Vol+
	I<<		I<< / Preset-
	>>		>> / Tune+
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Menu		Menu / Home
	Up		Up
	Setup		Setup / OPT /
	Left		Left
	Enter		OK





Original		Replacement		Original	Replacement
	Right		Right		
	Title		Sound / Title		
	Down		Down		
	OSD		Display / Media		
	Zoom		Zoom / Size		
	Angle		Info / Angle		
	Audio		Audio / Lang I/II		
	Sub-T		Subtitle / EQ		
	Repeat		Green / APP / Repeat		
	A-B		Yellow / YouTube / Repeat		
	Slow		Shift + Play /		
	L/R		Smart / List		
	Step		Shift + Pause / Step /		
	Return		Back / Return		
	Video		Shift + 4		
	Video		CH- / Page-		
	Default		Rec / Rec Mode		

