



 












 







































 







 

 






















 


Original	Replacement	Original	Replacement
	Power		Power
	Power Tv	 + 	Shift + Power
	Vol+ Tv		Vol+
	CH+ Tv	 + 	Shift + CH+ /
	Drive Select		Display / Media
	AV Input Tv	 + 	Shift + AV / Input / RDS
	Vol- Tv		Vol-
	CH- Tv	 + 	Shift + CH- /
	1		1
	2		2
	3		3
	CH/Page+		CH+ / Page+
	4		4
	5		5
	6		6
	CH/Page-		CH- / Page-
	7		7
	8		8
	9		9
	Internet		Smart / List
	Last View		Fav / Marker / PC
	0		0
	Radio/Tv		TV/Radio /
	Skipe	 + 	Shift + Smart / List
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search/Rewi		<< / Tune-
	Slow/search >>		>> / Tune+
	Stop		Stop / Hold
	Pause/Pause Live		Pause / Step / Freeze
	Play		Play / Slow
	i/Status		Info / Angle
	X/Exit		Exit / Cancel / Clear
	Guide		Guide / EPG / -/-





Original	Replacement
 Pop-Up menu/Direct	 D.Menu / Top
 Left	 Left
 Up	 Up
 OK	 OK
 Right	 Right
 Function Menu	 Menu / Home
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Text	 Text / Goto
 STTL	 Subtitle / EQ

Original	Replacement
 Prog/Check	 Shift + TV/Radio / Program
 Chapter	 Zoom / Size
 Time Slip	 Picture / Format
 Audio	 Audio / Lang I/II
 Input Select	 AV / Input / RDS
 DEL	 Sleep / Timer
 Manual Skip -10s	 Shift + Left
 Manual Skip +60s	 Shift + Right

