

 



 





 

 



 





 

 



 





































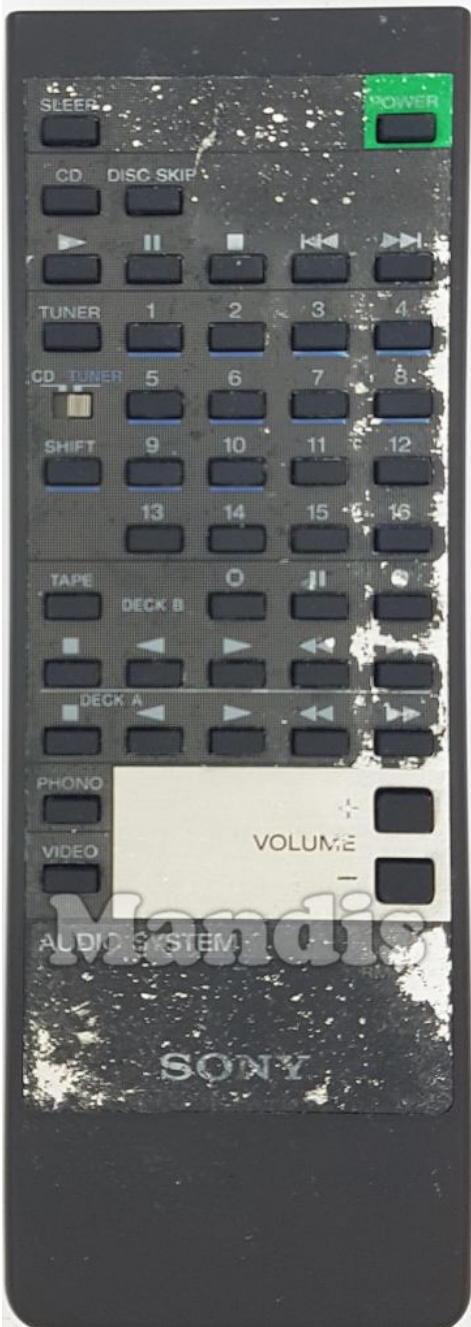


Original	Replacement	Original	Replacement
 Power	 Power	 3 Tuner	 3
 Sleep	 Sleep / Timer	 4 Tuner	 4
 Phono	 Red / Netflix / Search	 5 Tuner	 5
 Video	 Blue / Prime Video / Random	 6 Tuner	 6
 Tape	 Green / APP / Repeat	 7 Tuner	 7
 Tuner	 TV/Radio /	 8 Tuner	 8
 CD	 Yellow / YouTube / Repeat	 9 Tuner	 9
 Volume+	 Vol+	 10 Tuner	 0
 Volume-	 Vol-	 Shift	 Smart / List
 Disc Skip	 Zoom / Size	 1 CD	 Shift + 1
 Play CD	 Play / Slow	 2 CD	 Shift + 2
 Pause CD	 Pause / Step / Freeze	 3 CD	 Shift + 3
 Stop CD	 Stop / Hold	 4 CD	 Shift + 4
 I<< CD	 I<< / Preset-	 5 CD	 Shift + 5
 >>I CD	 >>I / Preset+	 6 CD	 Shift + 6
 1 Tuner	 1	 7 CD	 Shift + 7
 2 Tuner	 2	 8 CD	 Shift + 8





Original	Replacement	Original	Replacement
	Shift + 9		Up
	Shift + 0		Down
	Guide / EPG / -/--		CH- / Page-
	Fav / Marker / PC		CH+ / Page+
	Shift + Guide / EPG / -/--		
	Shift + Fav / Marker / PC		
	Display / Media		
	Shift + Display / Media		
	Shift + Stop /		
	<< / Tune-		
	>> / Tune+		
	Right		
	Left		
	Shift + Pause / Step /		
	Shift + Rec / Rec Mode		
	Rec / Rec Mode		
	OK		

