








 


 

 


 

 







Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 1	 1	 P+	 CH+ / Page+
 2	 2	 P-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 [G]	 Guide / EPG / -/--
 9	 9	 i	 Info / Angle
 0	 0	 ←	 Back / Return
 Lang	 Audio / Lang I/II	 Exit	 Exit / Cancel / Clear
 [=]..	 Subtitle / EQ	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 Home	 Shift + Menu /	 Text	 Text / Goto
 Smart	 Smart / List	 <<	 << / Tune-
 Vol+	 Vol+	 Stop	 Stop / Hold





Original	Replacement	Original	Replacement
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Pause	 Pause / Step / Freeze		
 Play	 Play / Slow		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Netflix	 Shift + Red / Netflix /		
 YouTube	 Shift + Yellow / YouTube /		
 prime video	 Shift + Blue / Prime		
 Google Play	 Display / Media		

