



Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Mode	 Picture / Format
 Open/Close	 Eject / Surround
 A-B Repeat	 Yellow / YouTube / Repeat
 Repeat	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 Zoom	 Zoom / Size
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Display	 Display / Media
 Clear	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4

Original	Replacement
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 Menu	 Menu / Home
 Top Menu	 D.Menu / Top
 Return	 Back / Return
 Setup	 Setup / OPT /
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Search Mode	 Red / Netflix / Search





Original	Replacement
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Stop	Stop / Hold
Play	Play / Slow
Still/Pause	Pause / Step / Freeze

Original	Replacement

