





Original	Replacement	Original	Replacement
Power	Power	FM/AM	TV/Radio /
1	1	Timer	Sleep / Timer
2	2	I<<	I<< / Preset-
3	3	<< Preset	<< / Tune-
4	4	>>I	>>I / Preset+
5	5	Preset >>	>> / Tune+
6	6	Tuning/Group/PTY	CH+ / Page+
7	7	Tuning/Group/PTY Down	CH- / Page-
8	8	PTY Search	AV / Input / RDS
9	9	Display/Progra	Shift + Display / Media
0	0	News/Info	Info / Angle
+10	Guide / EPG / -/--	Display Mode	Display / Media
Stop	Stop / Hold	Repeat	Green / APP / Repeat
Play/Pause CD	Play / Slow	Random	Blue / Prime Video / Random
Tape	Shift + 5	Sound Mode	Sound / Title
Fade Muting	Mute / Dimmer	HBS	Subtitle / EQ
Clock/Sleep	Smart / List	Vol+	Vol+





Original	Replacement
 Vol-	 Vol-

Original	Replacement

