







 














Original	Replacement
	Power
	Source
	[=]
	I-II
	[...]
	Red
	Green
	Yellow
	Blue
	Menu
	EPG
	Up
	<<
	Play
	Pause
	>>
	Down

Original	Replacement
	Option
	[i+]
	Vol+
	Stop
	Page+
	Vol-
	Mute
	Page-
	1
	2
	3
	FAV
	4
	5
	6
	J/Slideshow
	7

	Shift + Setup / OPT / Tools
	Info / Angle
	Vol+
	Stop / Hold
	CH+ / Page+
	Vol-
	Mute / Dimmer
	CH- / Page-
	1
	2
	3
	Fav / Marker / PC
	4
	5
	6
	TV/Radio /
	7





Original	Replacement	Original	Replacement
8	8	8	8
9	9	9	9
ROTATE	Rotate	MEDIA DISPLAY	Display / Media
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /
0	0	HDMI - BAT 0	0
[<>]	[<>]	FORMAT PICTURE	Picture / Format
ZOOM	Zoom	SIZE ZOOM	Zoom / Size

Original	Replacement	Original	Replacement

