



Original	Replacement	Original	Replacement
	Power		Power
	CBL/SAT		AV / Input / RDS
	DVD		Shift + 2
	Tv Audio		Audio / Lang I/II
	Blu-ray		Shift + Blue / Prime
	AUX		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Green / APP /
	8K		Shift + Yellow / YouTube /
	Phono		Guide / EPG / -/--
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Internet Radio		Shift + 0
	Quick Select 1		TV/Radio /
	Quick Select 2		Sound / Title
	Quick Select 3		Quick Select 2
	Quick Select 4		Quick Select 3
	CH/Page Up		Quick Select 4
	CH/Page Down		Picture / Format
	Eco		D.Menu / Top
	Mute		Zoom / Size
	Volume+		CH+ / Page+
	Volume-		CH- / Page-
	Info		Smart / List
	Option		Mute / Dimmer
	Back		Vol+
	Setup		Vol-
	Up		Info / Angle
	Down		Shift + Setup / OPT / Tools
	Left		Back / Return
	Right		Setup / OPT /










 



 





Original	Replacement	Original	Replacement
 Power	 Power	 Quick Select 2	 Picture / Format
 CBL/SAT	 AV / Input / RDS	 Quick Select 3	 D.Menu / Top
 DVD	 Shift + 2	 Quick Select 4	 Zoom / Size
 Tv Audio	 Audio / Lang I/II	 CH/Page Up	 CH+ / Page+
 Blu-ray	 Shift + Blue / Prime	 CH/Page Down	 CH- / Page-
 AUX	 Shift + 7	 Mute	 Mute / Dimmer
 Tuner	 Shift + 6	 Volume+	 Vol+
 Bluetooth	 Shift + 9	 Volume-	 Vol-
 Game	 Blue / Prime Video / Random	 Up	 Up
 8K	 Yellow / YouTube / Repeat	 Down	 Down
 Phono	 Guide / EPG / -/--	 Left	 Left
 USB	 Shift + 8	 Right	 Right
 Media Player	 Display / Media	 Back	 Back / Return
 CD	 Shift + 3	 I<</Tune-	 I<< / Preset-
 Internet Radio	 Shift + 0	 Play	 Play / Slow
 Internet Radio	 TV/Radio /	 >>I/Tune+	 >>I / Preset+
 Quick Select 1	 Sound / Title	 <<	 << / Tune-









Original	Replacement
 Power	 Power
 CBL/SAT	 AV / Input / RDS
 DVD	 Shift + 2
 Tv Audio	 Audio / Lang I/II
 Blu-ray	 Blue / Prime Video / Random
 AUX	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Green / APP / Repeat
 8K	 Yellow / YouTube / Repeat
 Phono	 Guide / EPG / -/--
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + 0
 Internet Radio	 TV/Radio /
 Quick Select 1	 Sound / Title

Original	Replacement
 Quick Select 2	 Picture / Format
 Quick Select 3	 D.Menu / Top
 Quick Select 4	 Zoom / Size
 CH/Page Up	 CH+ / Page+
 CH/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Back	 Back / Return
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow
 >>I/Tune+	 >>I / Preset+
 <<	 << / Tune-



