 









 

 

 











 



 

 





Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Search	 Red / Netflix / Search
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Pause	 Pause / Step / Freeze

Original	Replacement
 Play	 Play / Slow
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>I	 >>I / Preset+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Top Menu	 D.Menu / Top
 Down	 Down
 Menu	 Menu / Home
 Clear	 Exit / Cancel / Clear
 Display	 Display / Media
 Return	 Back / Return
 Mode	 Text / Goto





Original	Replacement	Original	Replacement
Open/Close	Eject / Surround	Play	Play / Slow
Power	Power	Stop	Stop / Hold
1	1	I<<	I<< / Preset-
2	2	<<	<< / Tune-
3	3	>>	>> / Tune+
4	4	>>I	>>I / Preset+
5	5	Up	Up
6	6	Left	Left
7	7	Enter	OK
8	8	Right	Right
9	9	Top Menu	D.Menu / Top
0	0	Down	Down
Search	Red / Netflix / Search	Menu	Menu / Home
Angle	Info / Angle	Clear	Exit / Cancel / Clear
Subtitle	Subtitle / EQ	Display	Display / Media
O))/Audio	Audio / Lang I/II	Return	Back / Return
Pause	Pause / Step / Freeze	Mode	Text / Goto



