

























































Original		Replacement		Original		Replacement	
	Operate		Power		Prog+		CH+ / Page+
	Correct		Back / Return		Vol+ Tv		Vol+
	Eject		Eject / Surround		Prog+ Tv		Shift + CH+ /
	Enter		OK		0		0
	Trans AUX		Setup / OPT /		Prog-		CH- / Page-
	1		1		Vol- Tv		Vol-
	2		2		Prog- Tv		Shift + CH- /
	3		3		Menu		Menu / Home
	4		4		Disp		Display / Media
	5		5		Index		Smart / List
	6		6		SP/LP		Picture / Format
	VCR/TV		TV/Radio /		Count Clock		Yellow / YouTube / Repeat
	Power Tv		Shift + Power		0000		Exit / Cancel / Clear
	Mute Tv		Mute / Dimmer		I> Slow		Red / Netflix / Search
	7		7		Rec		Rec / Rec Mode
	8		8		Up		Up
	9		9		CH 1/2		Green / APP / Repeat





	Original	Replacement	Original	Replacement
	A.Dub	 Text / Goto		
	V.Dub	 AV / Input / RDS		
	--	 Guide / EPG / -/--		
	Down	 Down		
	Tracking Up	 Right		
	Tracking Down	 Left		
	Play	 Play / Slow		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	Stop	 Stop / Hold		
	Pause	 Pause / Step / Freeze		
	>	 Blue / Prime Video / Random		
	REV	 I<< / Preset-		
	FWD	 >>I / Preset+		





Original		Replacement		Original		Replacement	
	Operate		Power		Prog-		CH- / Page-
	Correct		Back / Return		Menu		Menu / Home
	Eject		Eject / Surround		Disp		Display / Media
	Enter		OK		Index		Smart / List
	Trans AUX		Setup / OPT /		SP/LP		Picture / Format
	1		1		Count Clock		Yellow / YouTube / Repeat
	2		2		0		0
	3		3		I> Slow		Red / Netflix / Search
	4		4		Rec		Rec / Rec Mode
	5		5		Up		Up
	6		6		CH 1/2		Green / APP / Repeat
	VCR/TV		TV/Radio /		A.Dub		Text / Goto
	7		7		V.Dub		AV / Input / RDS
	8		8		--		Guide / EPG / -/-
	9		9		Down		Down
	Prog+		CH+ / Page+		Tracking Up		Right
	0000		Exit / Cancel / Clear		Tracking Down		Left





Original	Replacement	Original	Replacement
	Play / Slow		
	<< / Tune-		
	>> / Tune+		
	Stop / Hold		
	Pause / Step / Freeze		
	Blue / Prime Video / Random		
	I<< / Preset-		
	>>I / Preset+		

