



| Original | Replacement |
|------------------|-----------------------|
| Power | Power |
| Mute | Mute / Dimmer |
| Preset/Folder Up | CH+ / Page+ |
| Vol+ | Vol+ |
| Preset/Folder | CH- / Page- |
| Function | Menu / Home |
| Vol- | Vol- |
| Sleep | Sleep / Timer |
| Play | Play / Slow |
| Pause | Pause / Step / Freeze |
| Tun-/l<<</>>> | << / Tune- |
| Stop | Stop / Hold |
| >>>/>>/Tuner+ | >> / Tune+ |
| Repeat | Green / APP / Repeat |
| Program/Memo | TV/Radio / |
| RDS | AV / Input / RDS |
| PTY | Picture / Format |

| Original | Replacement |
|------------|------------------------|
| PTY Search | Red / Netflix / Search |
| EQ | Subtitle / EQ |
| XDSS Plus | Audio / Lang I/II |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| MP3 Info | Info / Angle |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |

