



 

 






 
 

 

 

 

 



 





 





Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 Preset/Folder Up	 CH+ / Page+
 Function	 Display / Media
 Vol+	 Vol+
 Preset/Folder	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Program/Memor	 TV/Radio /
 USB Rec	 Rec / Rec Mode
 I<< / Tuning- / Left	 << / Tune-
 I<< / Tuning- / Left	 I<< / Preset-
 I<< / Tuning- / Left	 Left
 Repeat (Menu) /	 Green / APP / Repeat
 Repeat (Menu) /	 Up
 Repeat (Menu) /	 Menu / Home
 >>I / Tuning+ / Right	 >>I / Preset+

Original	Replacement
 >>I / Tuning+ / Right	 >> / Tune+
 >>I / Tuning+ / Right	 Right
 Stop / Enter	 Stop / Hold
 Stop / Enter	 OK
 Play/Pause /	 Play / Slow
 Play/Pause /	 Pause / Step / Freeze
 Play/Pause /	 Down
 Sound Effect	 Sound / Title
 Auto DJ	 Smart / List
 Delete	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Original		Replacement		Original		Replacement	
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
INFO	Info	ANGLE INFO	Info / Angle				
0	0	HDMI - SAT 0	0				
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer				
RDS	RDS	YouTube REPEAT A-B	Yellow / YouTube / Repeat				
PTY	PTY	Prime Video RANDOM	Blue / Prime Video / Random				

